

Quick-Start Guide

UNITE[®] 50 4K AF



QSG-0114-001 v1.1 December 2020

UNITE® 50 4K AF Camera

© 2020 ClearOne, Inc.

Information in this document is subject to change without notice.

Compliance

Details about compliance for the UNITE® 50 4K AF Camera are available online on ClearOne's website (www.clearone.com) in the Resource Library.

ClearOne[©] Contacts

Headquarters

5225 Wiley Post Way Suite 500 Salt Lake City, UT 84116

US & Canada

Tel: 801.975-7200 Fax: 801.303.5711

International

Tel: 801.975.7200

Sales

Tel: 801.975.7200 email: sales@clearone.com

Technical Support


Tel: 800.283.5936 email: <u>videotechsupport@</u> <u>clearone.com</u>

Important Safety Information

Before you set up the camera, read this manual carefully. Follow the setup instructions indicated in this manual.

Keep this manual for future use.

To prevent electric shock, do not remove screws or the camera housing. No self-serviceable parts are inside the housing.

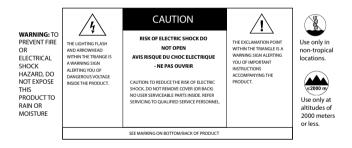

Product Details

Experience full 4K resolution and an ultra-wide angle field-of-view for professional quality visual collaboration in huddle spaces at an affordable price. Combine with your own choice of mic and speaker for an exceptional collaboration experience.

• 4K video, auto-focus, auto framing, and 3x digital zoom


Note: Auto framing is not available in 4K mode.

- 110° Field of View
- Wide dynamic range support for optimal image capture
- Super-high SNR with advanced 2D and 3D noise reduction
- Full-function USB 3.0 interface for video and power
- Control the camera's functions via IR remote or UVC protocol
- Easily mounted on monitors using standard damping rotaryshaft support
- Perfect for popular cloud-based applications such as ClearOne's COLLABORATE® Space, Microsoft Teams and Skype for Business, Zoom, WebEx, GoToMeeting, and others

System Requirements

Windows 7, 8, 8.1, 10, MacOS, Linux

Main Parts of Camera

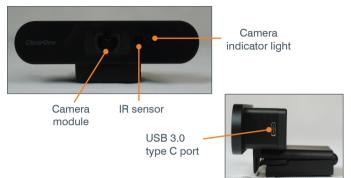

Care and Maintenance

- 1. Never aim the lens of the camera at extremely bright objects.
- Use a soft cloth to clean the camera. If needed, moisten the cloth with a weak solution of water and a neutral kitchen detergent.
- 3. When you carry the camera, do not hold the camera head.
- Make sure the camera is far away from any area where radiation, X-rays, strong electric waves, or magnetism exist.
- 5. Do not use the camera outdoors.
- 6. Do not operate the camera outside of 32 °F (0 °C) 104 °F (40 °C).

QSG-0114-001 v1.1 December 2020

Packing List







Camera

Remote Control USB cable 6 ft. (1.8 m)

Carefully inspect the shipment. If the shipment shows obvious signs of damage, retain the box and packing material for inspection by the carrier. Contact the carrier immediately.

ClearOne is not responsible for product damage incurred during shipment.

Setup

 Place the camera and bracket on the monitor and adjust the bracket hinge to accommodate your preference for the angle of the camera.



Quick-Start Guide

2. Connect the USB cable to the USB 3.0 Type C connector on the camera and the other end to a USB 3.0 port on your computer.



 Launch your preferred video collaboration application.

The application activates the camera.



Troubleshooting

Problem	Resolution
Image is jittery when the camera lens is at max zoom	Ensure that the camera is installed in a stable position.
	Remove vibrating objects/machinery from the proximity of the camera.
Remote control not operating	Check/replace batteries in the remote control unit.
	Ensure the camera working mode is correct.
	On the remote control, press the correct camera number button (1, 2, 3, or 4).

Remote Control

Important: Power button does not turn off cameras.

> F1: Start Auto Framing F2: Stop Auto Framing

Direction/Menu Operation

In menu mode:

Up/down: select menu options Left/right: change option or value

In non-menu mode:

Up/down: tilt up/down Left/right: pan left/right






Camera selection: switch between four cameras

Zoom In/Out

Ok

In menu mode: navigate within the selected menu.

In non-menu mode: control pan/tilt speeds.

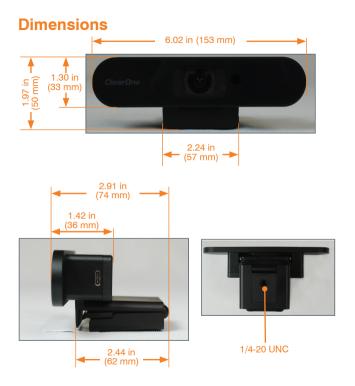

QSG-0114-001 v1.1 December 2020